Device Information

User can find the current detailed information, namely: SIM card No., IMEI, IMSI, SSID, Max user No., Wi-Fi Performance, LAN name, IP/MAC/WAN IP address, Software/Firmware/Hardware version information, data statistics and data limitation settings.



Statistics

Shows the current upload/download speed, current and month connection duration and total used data.

iome	Statistics				
nformation Device Information		Upload		Download	
1-1/11/-3	Speed		0b/s		06/3
Data Limit Settings		Duration	Downloaded	Uploaded	Total Used Data
Download Driver	Current Connection	00 05 22	3.75GB	6.56GB	10.32GB
SMS	Current Month	26.00.00	3.16GB	219.4MB	3.37GB

Data limit settings

Date setting of clearing data, Type of clearing data, data limitation monthly.



Ethernet Settings

Choose ethernet connection, auto as default.

4G ♥ 4G CPE			LTE CMCC	mi @it 👁
				English • Logout
Home	Ethernet Settings			
Information	Connection type:	Auto *		
Download Driver SMS	PPP- User Name: *	PPPOE Dynamic IP LAN		
Phonebook	Pass Phrase *			
Settings		Display Password		
Network Settings	Primary DNS *			
Ethernet	Second DNS *			
► Ethernet Settings		Customer dns		
➤ Ethernet Status				
Wi-Fi Settings			Apr	Cancel
Device Settings	?			
Update	•			

07

Basic Settings ,

Modify wireless network parameters(SSID,SSID broadcast, max WIFI users No. etc.)

4/5 ♥ 4G CPE			LTE CMCC	all @tl 🔻
				English + Logour
Home	Basic Settings			
Information	Network Name (SSID) *	4G-CPE_1059		
Download Driver	Broadcast Network Name (SSID)	⊕ Enable ⊕ Disable		
SMS	Security Mode	WPA2-PSK(AES) *		
Phonebook	Pass Phrase *			
Settings		Display Password		
Network Settings		display password on the LCD		
Ethernet		diplay traffic on the lcd		
Wi-Fi Settings	Max Station Number	10 *		
- Basic Settings	WIFI sleep time(No client	no never *		
→ WPS	connection)			
Device Settings			Apr	Ay Cancel
Update	?			

Account Management

Modify current user name, password

45 € 46 CPE			LTE CMCC	and 11 9
Home	Account Managemen	t		
Download Driver SMS Phonebook Settings Network Settings	Current Username * New Username * Continn Username *	admin)))	y Cancel
Ethernet Wi-Fi Settings Device Settings Account Management Reset	Current Password * New Password * Confirm New Password *			by Canod
Prestart Update	3			

06

Reset Factory Settings

Reset factory settings, restart device.

		English • Logou
Home Information	Reset Factory Settings	
Download Driver	Reset Factory Settings	
SMS		Period
Phonebook Settings	?	
Network Settings	•	
Ethernet		
Wi-Fi Settings		
Device Settings		
Account Management		
+ Reset		
> Restart		
Update		

45 ♥ 4G CPE		LTE CMCC	English ▼ Logout
Home Information	Restart		
Download Driver SMS Phonebook	Restain Device		Rostat
Settings	?		
Network Settings			
Ethernet			
Wi-Fi Settings			
Device Settings			
Account Management			
> Reset			
> Restart			

Accessory list/Warning and notice

No.	Item name	Quantity
1	4G CPE	1
2	A C/DC adapter	1
3	Ethernet cable	1
4	User manual	1
5	4G LTE Antenna	1
6	WiFi Antenna	1

*Please don't start it in the place where it is forbidden or it may cause interference or damages.

 $\hbox{*When get close to high precision instruments, please turn it off, it may effect the performance of t$

the devices(such as the embedded medical equipment)

*Please don't put the device in the place where explosion may happen

*Keep the device dry, keep any liquid from it to make any damage

*Don't throw, hit the device, it will damage the PCBA and effect the performance.

*Don't operate it with wet hands, it may cause electric shock.

"It will get hot which is normal when it is put in the place with weak signal or high temperature for a long time. It will not influence the usage and the life of it, don't touch it with skin for a long time. "Don't store it in a high temperature environment, it will shorten the life of the device, damage it

or make explosion.

08